

BOSCH RANGE EXTENDER & CABLE KITS

POWERMORE 250 KITS

124.24003 EXTERNAL BATTERY BOSCH POWERMORE 250WH KIT (EU28,CH,NO,AUS,NZ) CABLE NOT INCLUDED
(Bosch part number BBP3620 / EB12.100.05G)

124.24076 EXTERNAL BATTERY BOSCH POWERMORE 250WH KIT (US, CAN, KOR) CABLE NOT INCLUDED
(Bosch part number BBP3625 / EB12.100.05H)



CABLES

124.24033 CABLE BOSCH POWERMORE 100MM (FOR DUNE)
(Bosch part number BCH3923_100 / EB12.120.035)

124.24034 CABLE BOSCH POWERMORE 150MM (FOR CRAFTY / LEVEL)
(Bosch part number BCH3923_150 / EB12.120.036)

124.24077 CABLE BOSCH POWERMORE 300MM (FOR SLY)
(Bosch part number BCH3923_300 / EB12.120.07C)

DUNE



CRAFTY / LEVEL



SLY

